


SOLVENT RECYCLERS MAINTENANCE SCHEDULE



SOLVENT RECYCLERS SRB7.5 - SRB7.5V & SRB15 - SRB15V

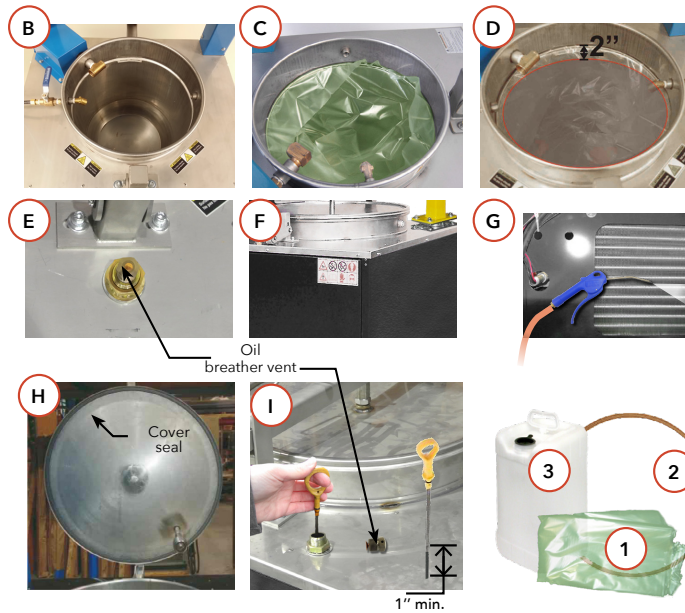

DAILY MAINTENANCE & OPERATION

A	Ensure the clean solvent tank is empty.	E	Keep the surface of the unit clean.
B	Remove the plastic bag and ensure the bottom of the boiler is clean. Remove any contaminants from the bottom of boiler.	F	Review and replace illegible or damaged stickers.
C	Put a new plastic bag in the boiler and secure with the ring by folding it inwards so as not to cover any of the spouts.	When the unit is full of used solvent : 1- Make sure the lip of the boiler is clean. 2- Verify the cover seal is in good shape and clean. 3- Close the lid. 4- Press the start button. 5- Verify that the oil breather vent (E/I) is not plugged up	
D	Fill up the unit with used solvent to a level of 2" below the retaining ring		


WEEKLY MAINTENANCE

G	Ensure that the condenser fins are clean and use an air blow gun if necessary.	H	Check that the cover seal is in good shape and replace if necessary.
		I	Check the oil level in the overflow tank is at 1" (at a minimum) with a dipstick.

RECOMMENDED SPARE PARTS

#	Description	Part number	#	Description 30/30V	SRB7.5 / SRB7.5V	SRB15 / SRB15V
1	Replacement bags (25 bags)	300004	2	Orange cover seal	304018	304023
	Replacement bags (100 bags) (SRB7.5)	300006		Black cover seal	304027	304024
	Replacement bags (100 bags) (SRB15)	300019	3	Oil 2.5 gal / 10 L	330067	

SOLVENT RECYCLERS SRB30, SRB30V, SRB45, SRB45V, SRB60 & SRB60V

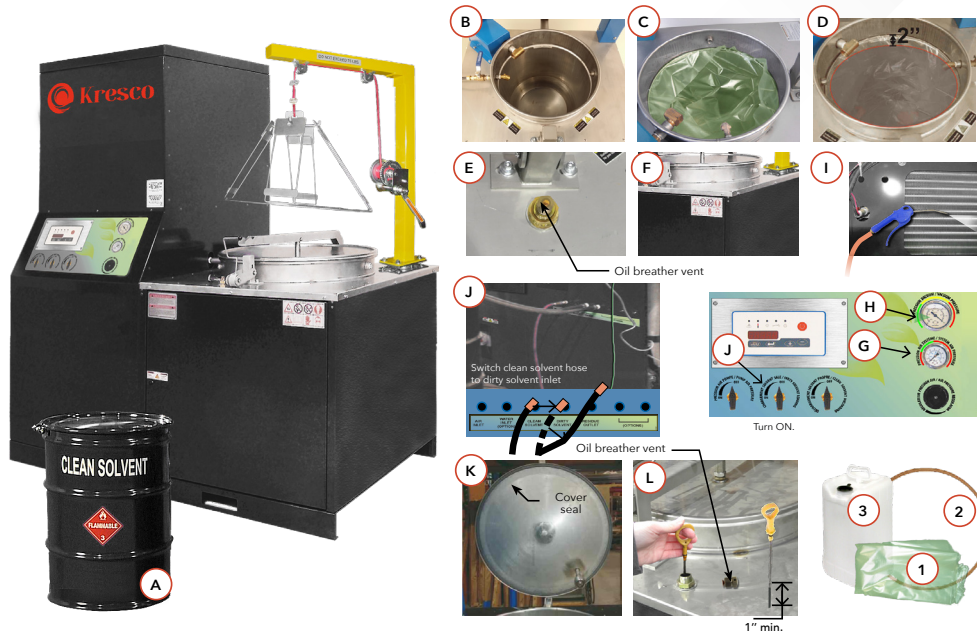

DAILY MAINTENANCE & OPERATION

A	Ensure the clean solvent tank is empty.	E	Keep the surface of the unit clean.
B	Remove the plastic bag and ensure the bottom of the boiler is clean.	F	Review and replace illegible or damaged stickers.
C	Remove any contaminants from the bottom of boiler.	When the unit is full of used solvent : 1- Make sure the lip of the boiler is clean. 2- Verify the cover seal is in good shape and clean. 3- Close the lid. 4- Press the start button. 5- Verify that the oil breather vent (E/I) is not plugged up	
C	Put a new plastic bag in the boiler and secure with the ring by folding it inwards so as not to cover any of the spouts.		
D	Fill up the unit with used solvent to a level of 2" below the retaining ring.		

WEEKLY MAINTENANCE

G	Ensure that the condenser fins are clean and use an air blow gun if necessary.	H	Check that the cover seal is in good shape and replace if necessary.
		I	Check the oil level in the overflow tank is at 1" (at a minimum) with a dipstick.

RECOMMENDED SPARE PARTS

#	Replacement bags	Part number	#	Description	SRB30 / SRB30V	SRB45 / SRB45V	SRB60 / SRB60V
1	100 bags (SRB30)	300008	2	Orange cover seal	304020		
	100 bags (SRB45)	300009		Black cover seal	304025		
	100 bags (SRB60)	300026	3	Oil 5 gal / 20 L	300068 (SRB60 : need 3 for oil change)		